



Note: This Fig. explains units that move PWBs from right to left.
 For units that move PWBs in the opposite direction, read
 "right" as "left" and "left" as "right".

Mach630NP (R-L) Appearance