# operating and instructions

# ECOMET" IV GRINDER/POLISHER EUROMET" I POWER HEAD

© 1983 BUEHILK ITn.



BUEHLER


MAGO-SOW)

ECOMET

APPARATUS FOR MICPQSTFIUCTLJHAL ANALYSIS 41 WAUKEGAH ROAD \* LAKE BLUFF, ILLINOIS USA G0044

I WAUKEGAN KUAD " LAKE BLUFF, ILLINUIS USA GOO-

# ECOMET\* IV GRINDER/POLISHER EUROMET™ I POWER HEAD

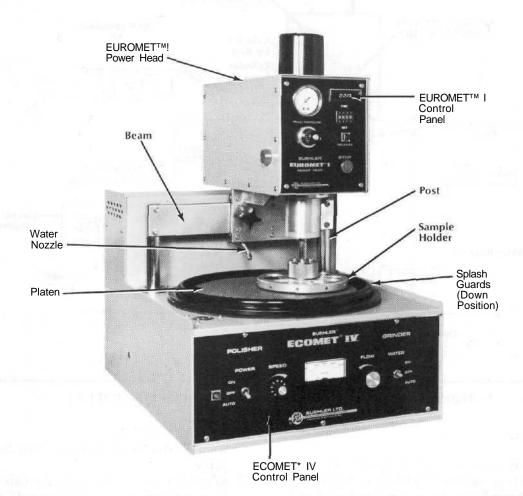

## Figure 1. ECOMET<sup>®</sup> IV GRINDER/POLISHER WITH EUROMET<sup>™</sup> I POWER HEAD

# **UNPACKING:**

Carefully unpack and check contents. If any components are missing or damaged, save the packing list and material and advise the carrier and Buehler Ltd. of the discrepancy. For your warranty protection and our permanent file, please complete and return the enclosed Equipment Registration Card.

Two persons are required to safely lift the ECOMET® IV from the shipping carton. Open areas, provided at the corners of the carton, permit access to the machine base. Remove the three %&" bolts securing the ECOMET® IV to the plywood base.

# ASSEMBLY:

The ECOMET® IV Grinder/Polisher is shipped fully assembled except for the Polishing Platen with Cloth and Paper Holding Bands. The EUROMET<sup>™</sup> I Power Head, packed in a separate box is also fully assembled.

Interconnection of the two Units is described under Installation. Also included is a packet containing samples of PSA backed Polishing Cloth and CARBIMET® Abrasive Paper Discs.

# INSTALLATION OF THE ECOMET® IV GRINDER/POLISHER:

The ECOMET® IV Base Unit should be placed on a BUEHLER® TECH-MET® Table or other sturdy table located convenient to electric power, water, drain and compressed air. Installation should be performed as illustrated in Figure 2 and described below.

#### Electrical

The unit can either be plugged into an existing outlet or hard wired to an electrical source rated for the voltage and frequency indicated on the Specification Plate.

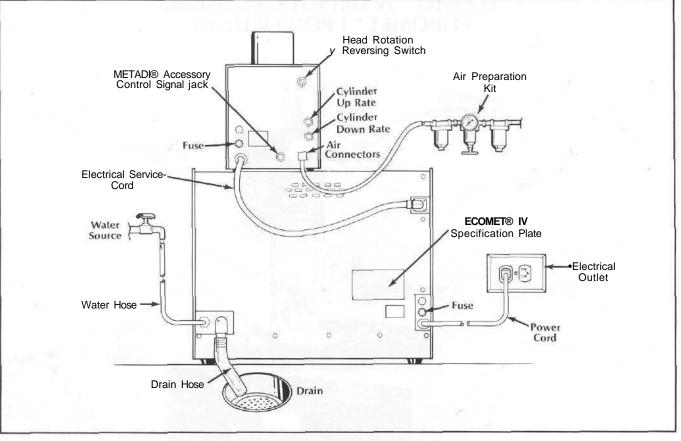


Figure 2. INSTALLATION OF ECOMET® IV AND EUROMET™ I

# Plumbing

Coolant water is supplied to the ECOMET® IV Base Unit by connecting one end of a male %" NPT fitting to the Water Outlet Fitting located on the Rear Panel of the Unit. The other end should be connected to a water source, equipped with a separate shut-off valve.

Drain connection is made by attaching one end of a 1" ID plastic or rubber hose to the Drain Outlet Fitting located on the Rear Panel of the ECOMET® IV.

The remaining free end should extend to a nearby sink or other available drain or catch container.

# INSTALLATION OF EUROMET<sup>™</sup> I POWER HEAD:

The EUROMET<sup>™</sup> I Power Head must be installed to an ECOMET<sup>®</sup> IV Grinder/Polisher, following these simple operations (see Figure 3).

- 1. Remove the Covers and Gaskets from the two holes in the Deck of the ECOMET® IV Base Unit.
- 2. Insert one Post into each Hole.
- 3. Place a flat rubber Gasket on each Post, then slip on the Mounting Flange, with O-Ring facing upward.
- 4. Position the Beam so it rests on the flat area of both posts with the countersunk holes facing out-

ward. Fasten each end with two Socket Head Screws.

- Rotate the Nut Collar inside the cabinet to align the screw holes with the Flange and Gasket Holes; insert (4) 6-32 screws through the Flange and Gasket and into the Nut Collar.
- 6. Repeat the operation described in 5 for the second post and tighten all 8 screws.
- Remove-the Beam from the Posts and slide the Beam into the slot located underneath the EUROMET<sup>™</sup> I Head with countersunk side of Beam visible from the front of the machine.
- 8. Lock the Beam in place with the 2 Locking Knobs.
- 9. With the assistance of a second person, lift the Head Unit, (attached to the Beam) into position and insert the two socket head screws through the Beam into each Post. Tighten the screws securely.
- 10. Insert one Set Screw through the hole in each side of the cabinet to lock the Post in place.

# Electrical

Connection is made to the ECOMET® IV by plugging the multipinned connector end of the Electrical Service Cord into the Power Receptacle on the rear Panel of the ECOMET® IV.

NOTE: Connector must be inserted in correct orientation detprminpd hv onirlp nin

## Compressed air

Operation of the EUROMET<sup>™</sup> I Head requires a compressed air source of 80 psi to obtain the rated cylinder force. An Air Preparation Kit (20-1364) should be installed in the air line to control pressure, and remove dirt and moisture, if the existing air source does not provide this protection.

# OPERATION-ECOMET® IV ONLY

To operate ECOMET® IV independent of the EUROMET<sup>™</sup> I Power Head, turn the water Flow Knob to minimum flow (furthest counterclockwise position) before actuating Water Switch, then turn the Power and Water Control Switches to the ON position (see Figure 1). In this position, the Machine is operated in the untimed (manual) mode with the full range of speed control. Water flow is fully control led by adjusting the Water Flow Knob and STOPS automatically when the machine is turned OFF.

# OPERATION-ECOMET® IV AND EUROMET™ I:

When the EUROMET<sup>TM</sup> I Power Head has been correctly connected to the ECOMET<sup>®</sup> IV, the two Units may be controlled automatically, using the controls on the Front Panel of the EUROMET<sup>TM</sup> I Power Head (see Figure 4). All control functions should be checked out before a sample holder is attached in place to


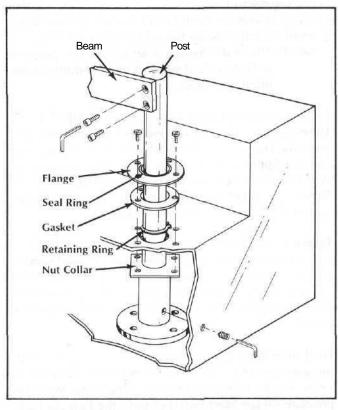


Figure3. INSTALLATION OF EUROMET™! POWER HEAD SUPPORT STRUCTURE TO ECOMET® IV GRINDER/POLISHER

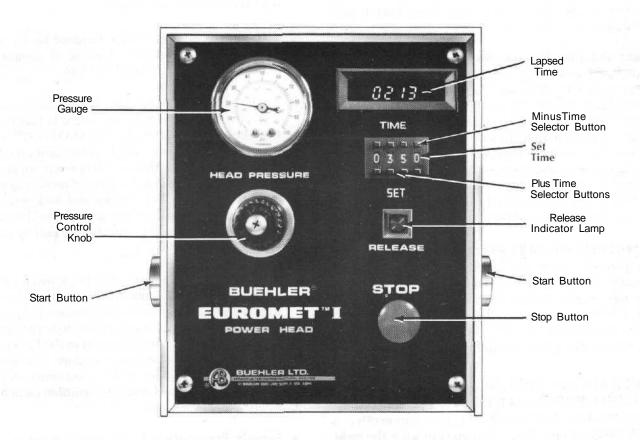

Ficure 4. EUROMET<sup>™</sup> I POWER HEAD CONTROLS

verify satisfactory operation of the two units. For this mode of operation, both Power Switch and the Water Control Switch must be turned DOWN to AUTO.

NOTE: The Water Switch is set to "AUTO" position only if coolant water is needed during automatic operation.

To operate both ECOMET® IV and EUROMET<sup>™</sup> I: **Timer**—set to the desired number of minutes and seconds. This is accomplished by repeatedly depressing the appropriate buttons under the appropriate Window until the desired value appears (refer to Figure 4). The Left two digits indicate up to 59 minutes and the Right two read up to 59 seconds.

**Pressure**—set to the pressure desired using the Pressure Knob and observing the response on the Pressure Gauge. Pressure may have to be adjusted after the samples contact the rotating platen. The applied force is determined by multiplying the Pressure Gauge value by 1.2.

**Dual Start Buttons** —depress simultaneously to commence operation. This is a safety feature which prevents accidental contact with moving parts. Maintain pressure on the Start Switches until the Release Light is illuminated, then release. Preset water flow begins when the system is started.

**Stop Button**—if problems are encountered during operation, the large, convenient Stop Button will instantly stop all operations.

**Head Rotation Reversal Switch**—this two-position Switch, located on the rear panel of the Power Head, determines the rotational direction of the Power Head Drive Shaft. In the UP position, the shaft (and the sample holder) will rotate in a direction counter to the rotation of the platen. This is the most common conditjon of rotation. To obtain the opposite direction of rotation {same direction as the platen}, the Switch should be turned to the DOWN position.

NOTE: The Power Head should be turned OFF when the rotation direction is changed.

Ascend and Descend Rate Controls —these two metering controls are in the lower right face of the rear panel of the EUROMET<sup>™</sup> I Head (Figure 2) and control the rate at which the Drive Shaft rises and lowers. The UPPER Knob controls the ascent and the LOWER Knob controls the descent. The shaft should descend to its limit in 2-3 seconds and ascend in J4 second.

# OPERATION-SETTING UP FOR SAMPLE PREPARATION:

The ECOMET® IV/EUROMET™ I combination offers a wide range of operating parameters to solve the most

difficult polishing problems.

- Platen Speed (variable)—0-600 rpm
- Head Pressure (ram force) -0-100 lbs. force
- Timer Range (variable)—59 minutes
  59 seconds

# Abrasive options are:

- ZIRMET® Abrasive Discs for coarse material removal
- Silicon Carbide Grinding Discs for rough or fine grinding
- Free lapping using the Conditioning Rings and dead weights
- Power Lapping using METADI® Diamond Power Lapping Accessory (see Accessories, Pages 10-12)

• Rough and Final Polishingclothson blank platens To aid in selecting the most effective abrasive operation, refer to Tables on Page 10.

# OPERATION-TIPS FOR SMOOTH OPERATION

- Platen installation is achieved by inserting the four lugs on the bottom side of each platen into the matching holes in the Drive Plate. A mechanical groove in the Drive Plate acts as a guide to locate the holes. Simply rotate the Platen in either direction until it engages the hole, then rotate the Platen in the clockwise direction while holding the Mounting Wheel in a fixed position.
- 2. Sample Holders have been designed to accept a wide variety of samples; loading of samples is accomplished using a Loading Plate.
- 3. No. 60-5450 MAX1-LOK<sup>™</sup> Chuck Assembly provides a positive attachment of the sample holder to the EUROMET<sup>™</sup> I Drive Shaft. The **MAXI-LOK<sup>™</sup>** may be removed from one sample holder and attached to another holder with ease. To operate, rotate the knurled outer Ring in a clockwise direction against the spring force. Slide holder and lock into the drive shaft as far as possible and release the outer ring. Test for adequate connection by pulling down on the Sample Holder.
- 4. Splash protection is provided by a, two-position Splash Ring that fits against the inside surface of the Polishing Bowl. Toobtain maximum protection, lift the Splash Ring upward and rotate to the detent position. The Ring should remain in the high position. To lower, reverse this procedure. The Splash Ring may also be removed for maximum access to the Polishing Bowl and for maximum clearance when changing Platens.
- 5. Sample Preparation Procedures selected will

depend on the material to be prepared. Some guidelines for preparing various material are provided in Tables on Page 10.

# OPERATION IN THE AUTO MODE

A Simplified Operation Sequence

- 1. Determine the desired preparation sequence required for the specific material to be prepared (refer to Page 10).
- 2. Load samples into a suitable holder selected from Page 14.
- 3. Apply the recommended Platen Cover abrasive and lubricant, when applicable. Make sure the Platen surface is clean and free of residues from previous operations. Adhesive residues may be removed with a chlorinated solvent.
- 4. For ECOMET® IV/EUROMET<sup>™</sup> I operation, make sure the Power Switch is in the "AUTO" position. If water is needed for grinding operations, set the Water Switch to the AUTO position also. The Water Flow Knob should be open so that water will flow as soon as the system is started. Once the desired Water Flow setting is achieved, it will be maintained if the Flow Knob is not disturbed.
- 5. Set the desired Time as described on Page 4.
- Set the required pressure using the Pressure Control Knob and the Pressure Gauge. The rate of Drive Shaft ascent and descent is adjustable by two valves located on the rear panel of the EUROMET<sup>™</sup> I Power Head.
- 7. Attach the loaded Sample Holder to the Drive Shaft.
- 8. Press the Dual Start Buttons and release when the Release Light has illuminated.

# DIAMOND POWER LAPPING

This technique is recommended in many of the procedures listed on Page 10, and provides the following distinct advantages over conventional Abrasive Fine Grinding.

- 1. Four Fine Grinding steps are replaced by one efficient Diamond Power Lapping step.
- 2. The surface finish achieved is always finer and flatter than can be obtained using conventional fine grinding.
- Considerable savings in time and labor are realized, particularly when preparing harder and more difficult samples. In many cases this will also result in

a definite cost savings because of the more efficient operation and the elimination of repetitious steps often required with fine grinding abrasive papers.

Diamond Power Lapping uses a copper composite Lap Plate onto which a liquid slurry of Diamond Abrasive is precisely charged. Application of the diamond slurry is carefully controlled through the use of a Slurry Pump which controls the frequency and duration of spray that is applied to the Lapping Platen. By means of this Control, precise operating conditions may be established and repeated. Wasteful over-application of diamond slurry is also prevented. Certain extreme sample preparation conditions or prolonged use ma\ cause the METADI® Lapping Platen to become out-offlat. To restore the platen to its flat condition dressing may be required. Consult the Instruction Manual for the METADI® Lapping Platen for complete instructions.

# MAINTENANCE

Daily:

Wipe polishing residues off all exposed surfaces, using a soft, moist cloth. Wipe dry.

• Daily:

Remove accumulations of grinding and polishing residues from the Bowl. This is accomplished b> removing the Splash Guard and any Platen which may be in place. If the accumulation is heavy remove the bulk amount with a soft scraper anc dispose of the residue in an approved manner. Remaining fine residues may then be washed into the Bowl Drain by turning on the coolant water anc directing the flow into the Bowl. If only fine accumulations are present, water flushing alone *mall* be adequate.

 ECOMET® IV Polisher/Grinder Motor and Drivt Spindle'are permanently lubricated and, therefore no additional attention is required.

## Annually:

Check the Belt of the ECOMET® IV annually to make sure it is taut and that no cuts or other defects have developed. Replace the belt if such defects are observed.

Semi-annually:

EUROMET<sup>TM</sup> I Head Spindle Column requires lubri cation every 6 months. Pry off the Black Plastic Cover, located immediately behind the Black Rounc Housing on the topof the EUROMET<sup>TM</sup>! Head. Appl^ 3 drops of 10 W or 20 W machine oil to the Oi Port. The Head Motor is permanently lubricatec and requires no maintenance.

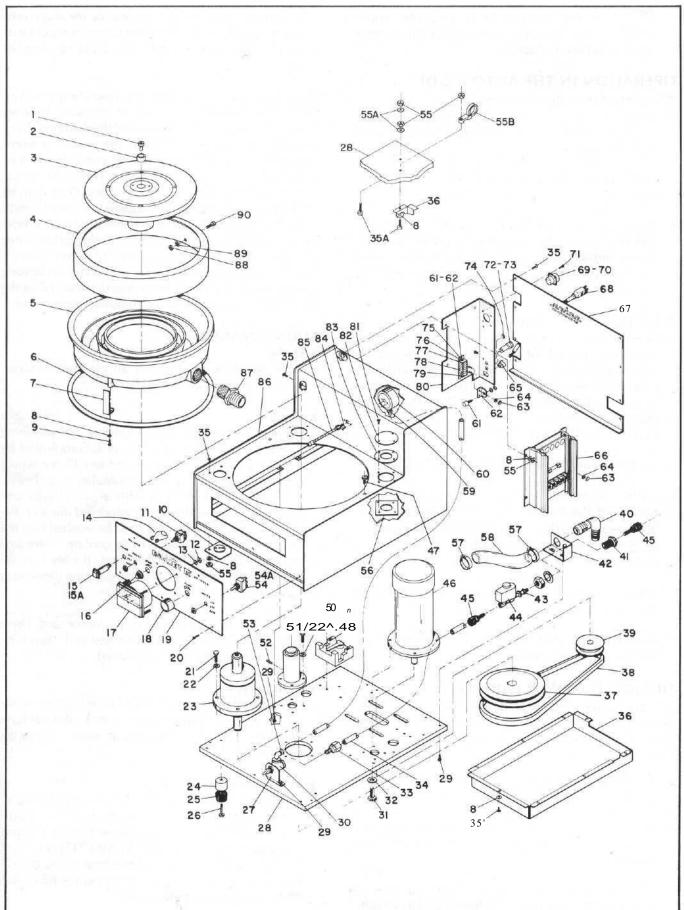


Figure 5. ECOMET® IV GRINDER/POLISHER ASSEMBLY DETAIL

# ECOMET® IV GRINDER/POLISHER PARTS LIST

(Details of design subject to change without notice.)

RE		NO. REQ	DESCRIPTION	RFF. NO.	PART NO.	NO. REQ.	DESCRIPTION
1	R-0984	1	Screw, 1/4-20 X 5/8" Skt Hd SS	48	1330-S22A	1	Relay 115V
2	1670-S	027 1	Pilot Bushing—Mtg Wheel		1330-S22B	1	Relay 220V
3	1670-50	012 1	Mounting Wheel	49	R-7485	2	Washer, #10 Nylon
4	1670-S	056 1	Splash Guard	50	R-7844	2	Screw, 8-32 X 3/4" Cr Pan I ld SS
5	1670-S	034 1	Bowl, Plastic 12"	51	1670-S021	2	Powprhead Post Socket
6	1670-S	058 1	Bowl Gasket	52	R-7895	2	Set Screw, 1/4-20 X 1/2"
7	1670-S	040 4	Bowl Clamp	53	R-4510	1	Male Elbow, 1/4" Tube-1/8" NFT
8	R-0611	<b>W</b> 18	Washer #10 SS	54	R-7889	1	Switch, IP DT Toggle
9	R-7894	4	Screw, 10 X 3/4" Hex W Hd HI-LO	54A	R-0564	2	Boot, Switch Handle
10	1670-50	041 1	Post Plate Assy.	55	R-0612	10	Nut, 10-32, Hex SS
11	R-7890	1	Switch, 3PDT Toggle	55A	R-0612LWE	2	Lock Washer #10 External
12	R-0603	4	Nut, 4-40 Hex SS	55 B	R-7747	2	Tie Strap
i, i	R-0603	<b>W</b> 4	Washer, #4 SS	56	1670-S028	2	Post Hole Nut Collar
14	1670-S0	069 1	Lamp Resistor Assy-	57	R-2744	2	Hose Clamp, H-16 SS
15	1723-S9	9 1	Pilot Light, Red 115V	58	R-2892	9.!~>"	PVC Clear Tubing
	1507-S	38 1	Pilot Light, Red 220V	59	R-7726	1	Male Connector, Barb 1/8" NPI
15	A 1180-S	136 1	Anchor Nut	60	1670-S048	1	90° Bulkhead Fitting
16	R-7028	1	Knob	61	R-7893	1	Potentiometer
17	1670-S0		Tachometer, 800 RPM	62	1670-5054	1	Trimpot Bracket
18	133O-S		Knob	63	R-0605	5	Nut, #6 Hex, SS
19	1670-S		Nameplate	64	R-7072	5	Lock Washer
20	R-7850	5	Screw, 8-32 X3/8"Cr Pan Hd SS	65	R-4536	1	Cord Bushing 115V
21	R-2275	12	Screw, 5/16-18 X 1 " I lex I ld		R-4535	1	Cord Bushing 220V
22	R-0617		Lock Washer, 5/16"	66	1670-S006	1	3/4 HP Control 115V
23	1670-S0		Spindle Assy.		1670-S007	1	3/4 HP Control 220V
24	1670-S0		Foot Spacer	67	1670-5015	1	Rear Panel
25	R-7886	4	Rubber Bumper	68	R-0497A	1	Cord and Plub 14-3 SJO 115V
26	R-2261	4	Screw, 1/4-20 X 2-1/2" Hex Hd	00	R-0496B	72"	Cable, 3 Wire European 220V
27	1670-S		Water Valve Bracket	69	R-7289	1	Connector Body
28	1670-50		Baseplate	70	R-7509	1	Connector Insert—5 pin
29	R-7565	If.	Screw, 10-32 X 5/8" Cr Pan Hd, SS	71	R-1603	4	Screw, 4-40 X 1/4" Sit Rd Hd 55
30	1600-S		Valve	72	1305-S17		Fuse Post
31	R-2296	4	Screw, 3/8 X 1-1/4" Hex Hd SS	73	R-7927	1	Fuse, 10A 250V-115V
32	R-0620		Washer, 3/8"	15	R-7764	2	Fuse, 5A 250V-220V
33	R-4512	1	Connector, 1/4" tube—1/4" NPT	74	R-2789	1	Snap Cap, 1/2" 115V
34	R-2886	42"	Nylon Tube, 1/4" O.D.	74 7 <sup>r</sup> »	1670-S055	1	Channel—T Strip
35	R-7519	25	Screw, 10-32 X 3/8" Cr Pan Hd SS	76	4000-S334	2	End Clamp
35		3	Screw, 10-32 X 3/4" Cr Pan Hd SS	77	4000-S333	2	Barrier End
.56	1670-50		Belt Guard	78	4000-3333	7	Terminal
.50 :S7	1670-SC		Pulley, 8.00" X5/8"	79	R-7891	1	Resistor, 110K115V
.58	1670-50		V-Belt	15	R-7892	1	Resistor, 220K 220V
39	1110-50		Pulley, 2.80" X5/8"	80	1670-S016	1	Electrical Panel
40	R-7887	1	Elbow, 1"X90°	81	R-2106	•6	Screw, 6-32 X 5/8" Sit Rd Hd SS
40	R-7742	1	Anchor Connector, 1/4" NPT	82	1670-S030	2	
41	1670-50		Rear Water Bracket			2	Post Hole Cover
42	R-7888	1	Nipple, 1/4" NPT, Close brass	83 <b>84</b>	1670-5029	∠ 1	Casket —Post Hole
43			Water Valve—Solenoid 115V		R-7847		Screw, 6-32 X 5/16" Cr Tr Hd SS
44	1670-50			85	1670-S039	1	Water Nozzle
	1670-S		Water Vaive-Solenoid 220V	86	167O-S003	1	Cabinet
45	R-4562	2	Connector, 1/4" Tube X 1/8" NPT	87	R-2891	1	Male Insert Adapter
46	1670-50		Motor, 3/4 HP 90 VDC 11V	88	R-0609	4	Nut, 8-32 Hex, SS
4-	1670-50 D 7759		Motor, 3/4 HP 180 VDC 22V	89	R-0609LWE	•	Lock Washer, #8 External Tooth
47	R-7758	2	Screw, 1/4-20 X 3/8" Cr Pan Hd SS	90	R-7853	4	Screw, 8-32 X 1/4" Skt Hd SS

۷.

-

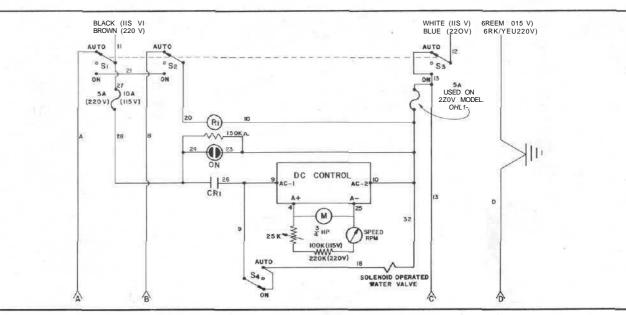


Figure 6. ECOMET® IV ELECTRICAL SCHEMATIC


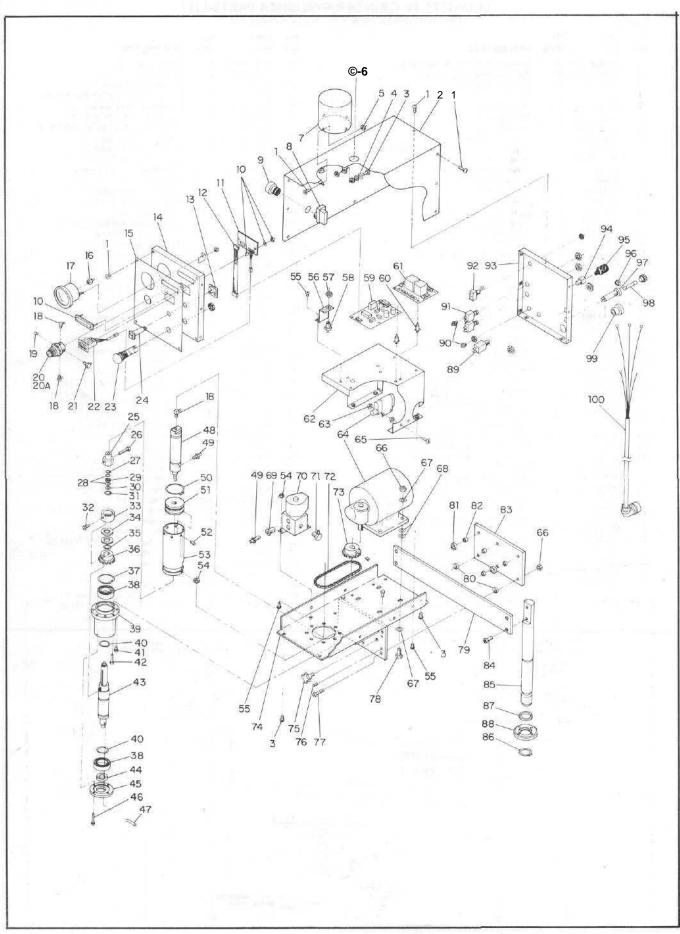


Figure 7. EUROMET™ I POWER HEAD ASSEMBLY DETAIL

8

#### EUROMET<sup>TM</sup> I POWER HEAD PARTS LIST (Details of design subject to change without notice.)

REF.	PART	NO.			REF. PART		NO.
NO.	NO.	REQ.	DESCRIPTION		NO. NO.		REQ. DESCRIPTION
1	R-1625TPH	25	Screw, 6-32 X 3/8", Cr Tr Hd SS	49	R-7923	3	Male Conn 18"NPT, 1/4" tube
2	5000-S043	1	Hood	50	R-7900	1	Retaining Ring, Ext., 2-1/2"
3	R-7306	5	Screw, b-32 X 1/2 ", Cr Tr Hd SS	51	5000-S017	1	Mounting Cap, Cyl.
4	R-0604WL	1	Washer, #6 Brass	52	R-7920	6	Set Screw, 10-24 X 1/2" Cone Pj SS
5	1180-572	6	Nut, 6-32, Kep	53	5000-S018	1	Standoff Cylinder
6	R-7949	1	Hole Plus, 7/8"	54	R-7908	9	Nut, 10-32, Keps
7	5000-S045	1	Housing, Round	55	R-16666PPH	10	Screw, 10-32 X 1/2", Cr Pan Hd SS
8	4000-S349	2	Mounting Base, 5witch	56	5000-SO15	1	Bracket, Oil Tube
9	4000-S348	2	Switch Head	57	R-7261	1	Nut, 1/8"NPT
10	5000-S065	1	Bezel, Timer	58	R-7922	1	Male Conn, 1/8"NPT, <b>1/8"OD</b>
11	5000-S07O	1	PC Board, Timer Display	59	50O0-S066	1	PCB, Timer, 115V
12	R-7918	1	Ribbon Connector		5000-S067	1	PCB, Timer, 220V
13	1180-S136	1	Anchor Nut	60	R-7456	8	Standoff, PCB
14	5000-S042	1	Housing, Front	61	5000-S019	1	PCB, Time Delay, 115V
15	5000-S001	i	Nameplate		5000-S072	1	PCB, Time Delat, 220V
16	R-7789	i	Fitting, Fern, 1/8"NPT, 1/8"OD	62	5000-5071	1	Shelf, PCB Mounting
17	4000-S413	1	Air Gauge, Pressure	63	R-0609	4	Nut, 8-32 Hex
18	R-7724	4	Male Elbow, Barb, 1/8"NPT, 1/4"OD	64	500O-S0O5	1	Gearmotor, 115V, w/Capacitor
19	R-0361	1	Pipe Plug, 1/8"NPT Hex Skt		S00O-S057	1	Cearmotor, 220V, w/Capacitor
20	4000-S412	1	Regulator, Pressure	65	R-1646	2	Screw, 8-32 X 1/2", Sit Rd Hd SS
20A	R-7716	1	Nut, Regulator	66	R-0615	10	Nut 1/4-20, Hex SS
21	R-7788	1	Fitting, 1/8"NPT X90°, 1/8"OD	67	RO615LW	8	Lockwasher, 1/4" SS
22	5000-S064	1	Switch, Pushwheel	68	R-7926	8	Washer, Brass, 1/4"
23	R-7911	1	Switch, Stop	69	R-0371	2	Bushing, Reducing, 1/4"-1/8"
24	1723-S9	1	Pilot Light, Red 115V	70	5000-S035	1	Air Valve, 4 Way, 115V
	1507-S38	1	Pilot Light, Red 220V		5000-SO32	1	Air Valve, 4 Way, 220V
25	5000-SO16	1	Thrust Nut	71	R-7729	1	Male Elbow, Barb, 1/4"NPT, 1/4"OD
26	R-7757	1	Screw, 10-32 X 1-1/2" Cr Pan Hd	72	5000-S054	1	Chain Assy.
27	R-790.3	1	Retaining Ring, Ext. 5/16"	73	5000-S047	1	Sprocket, Driver, 5/8"
28	5000-S022	2	Washer, Thrust 5/16"	74	5000-S036	1	Bracket, Head Support
29	5000-S021	1	Thrust Bearing, 5/16" ID	75	5000-5029	2	Knob and Stud Assy.
30	R-7904	1	Washer, Ring Support, 5/8"	76	R-7909	4	Set Screw, 1/4-28 X 7/16" Skt Hd, Nylon Tip
31	R-7897	1	Retaining Ring, Int. 7/8"	77	RO989	6	Screw, 1/4-20 X 1-1/4" Skt Hd Cap SS
32	R-7846	2	Screw, 6-32 X 1/4" Cr Pan Hd SS	78	R-7628	4	Screw, 1/4-20 X 1-1/4" Hex SS
33	5000-S014	1	Wiper Cup	79	5000-S037	1	Beam, Head Mount
34	5000-S013	2	Washer, Felt, 5/8"ID	80	5000-S040	2	Offset Spacer
35	R-7449	1	Retaining Ring, Ext. 7/8"	81	5000-S063	2	Sleeve Bearing
36	5000-S011	1	Sprocket, Driven	82	5000-S039	-	Spacer 1/4"ID
37	R-7901	1	Retaining Ring, Int. 1.85"	83	5000-S039	1	Back Plate, Head Mount
38	5000-S028	2	Ball Bearing, 25mm	84	R-7929	4	Screw, 5/16-18 X 1" Skt Hd Cap SS
39	5000-S028	1	Housing, Head Bearing	85	5000-S002	2	Post, Head Mount
40	R-7898	2	Retaining Ring, Ext. 0.98"	86	R-7902	2	Retaining Ring, Ext, 1-1/8"
41	R-0962	2	Screw, 10-32 X 3/8" Skt Hd Cap SS	87	R-7902 R-7907	2	Seal Ring, Square
42	R-0965	7	Screw, 10-32 X 3/8" Skt Hd Cap SS Screw, 10-32 X 3/4" Skt Hd Cap SS	88	5000-S003	2	Flange, Mounting Post
43	K-0905 5000-5062	1	Screw, 10-32 X 3/4 Skt Hd Cap SS Shaft and Sleeve Assy	89	R-7281	1	Jack, Isolated
44	5000-5082	i i	,	(t0	R-7201 R-7738	5	Connector, Male, 10-32 1/4"OD
45	5000-5010	1	Seal, 5/8" Shaft	91	5000-SO20	5 2	Valve, Air Flow Control
46		4	Bearing Cap	91	5000-S020	2	Rev. Switch Harness Assy.
40	R-7919 5000-5034	4	Screw, 10-24 X 3/4" Skt Hd Cap SS	92 93		1	
48			Dowel Pin, 1/4" X 1-1/4"	93 94	5000-S041	1	Housing Rear
40	5000-5006	1	Air Cylinder	94	R-7912	1	Bulkhead Conn, 1/8"NPT, 10-32

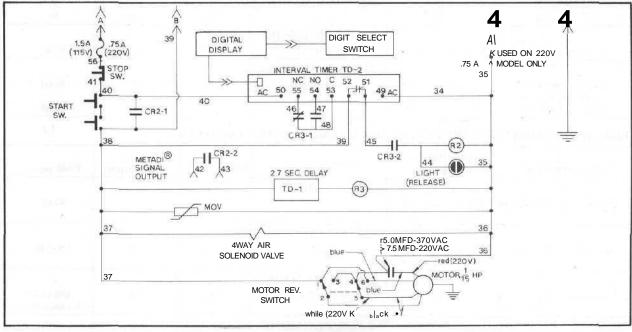

# Fiaure 8. EUROMET™ I POWER HEAD ELECTRICAL SCHEMATIC

# Table 1: RECOMMENDED PROCEDURE FOR: COMPLEX COMPOSITES SUCH AS INTEGRATED CIRCUITS AND OTHER SOLID STATE DEVICES

PRE-PREPARATION

ENCAPSULATE IN EPOXIDE RESIN	SECTION WITH ISOMET <sup>1*1</sup> SAW

ABRASIVE/SIZE	LAP/WHEEL COVERING	LUBRICANT	LOAD (lbs.)	SPEED (rpm)	TIME (sec.)
		FINE GRINDING			
SiC, 400Crit SiC, 600 Grit	CARBIMET® CARBIMET®	Water Water	30-50 30-50	300 300	30-60 30-60
		ROUGH POLISHING			
METADI® 6 Micron METADP1 Micron	TEXMET® TEXMET®	METADI® Fluid METADI® Fluid	20-40 20-40	300 300	60-120 60- 60
Gamma Alumina 0.05 Micron	MICROCLOTH®	FINAL POLISHING Distilled Water	20-40	150	30-60

Table 2: RECOMMENDED PROCEDURE FOR HIGH ALLOY AND HARDENED STEELS, WHITE IRON, CARBON STEELS, STAINLESS STEEL, MEDIUM HARD CERAMICS, SOME REFRACTORY METAL ALLOYS

ABRASIVE/SIZE	LAP/WHEEL COVERING	LUBRICANT	LOAD (lbs.)	SPEED (rpm)	TIME (sec.)
Zr Al2O3, 120 Grit	ZIRMET®	GRINDING Water	40-60	500	30-60
Diamond, 9 Micron	METADI® Diamond Power Lap Plate	LAPPING	30-50	150	120-240
METADI® 3 Micron	TEXMET®	ROUGH POLISHING METADI® Fluid	30-50	150	30-60
Gamma Alumina 0.05 Micron	MICROCLOTH®	FINAL POLISHING Distilled Water	10-20	150	30-60

## ECOMET<sup>R</sup> IV/EUROMET<sup>™</sup> I APPLICATIONS

Table 3: RECOMMENDED PROCEDURE FOR ALUMINUM, COPPER, BRASS, BRONZE, P.C. BOARDS, SOFT COMPOSITES

ABRASIVE/SIZE	LAP/WHEEL COVERING	LUBRICANT	LOAD (lbs.)	SPEED <rpm></rpm>	TIME (sec.)
SiC, 320 Grit	CARBIMET®	FINE GRINDING Water		400	30
SiC, 600 Grit	CARBIMET®	Water	30-50	400	30
METADI® 3 Micron	TEXMET®	ROUGH POLISHING METADI® Fluid	30-50	150	30-60
Gamma Alumina 0.05 Micron	MICROCLOTH®	FINAL POLISHING Distilled Water	15-20	150	30-60
Colloidal Silica	MASTERMET™		10-15	150	30-60

Table 4: RECOMMENDED PROCEDURE FOR CARBIDES, HARD CERAMICS

ABRASIVE/SIZE	LAP/WHEEL COVERING	LUBRICANT	LOAD (lbs.)	SPEED (rpm)	TIME (sec.)
Diamond, 45 Micron	*Metal Bonded Diamond Disc	GRINDING Water	40-60	300	30-60
Diamond, 9 Micron	METADI® Diamond Power Lap Plate	LAPPING	40-60	150	120-240
Diamond, 3 Micron	TEXMET®	ROUGH POLISHING METADI® Fluid	30-50	400	420-630 (7-9 Minutes)
Diamond, 1 Micron	TEXMET®	FINAL POLISHING METADI® Fluid	20-40	400	60-120

"Resin Bonded Diamond Disc for Hard Ceramics

# SUPPLIES FOR ECOMET® IV GRINDER/POLISHER AND EUROMET™ I POWER HEAD

POLISHING MATERIALS	POWDERS						
ТҮРЕ	NAME	<b>8oz.</b> (0-23 Kg)	1 lb. <b>(0.45</b> Kg)	5 lb. (2.3 Kg)	6 f . oz (0.18)		
	MICROPOLISH® B 0.05 micron Gamma	40-6301-008	40-6301 -01b	40-6301-080			
	MICROPOLISH® A 0.3 mit ran Alpha	40-6305-008	40-6305-016	40-6 505-080			
	MICROPOLISH* C 1.0 micron Alpha	40-6310-M8	40-6310-016	40-6310-080			
	Levigated Alumina		4(1-64 55-016	40-6435-080	×.		
Aluminum Oxide (AlaOi)	Alpha MICROPOLISH® Alumina No I 5 0 micron				40-6J51-0		
	Alpha MICROPOLISH® Alumina No. 1C 1. 1) mic ron				40-6354-0		
	Alpha MICROPOLISH*) Alumina No. 2A 0.1 micron				40-bl52-0		
	Gamma MICROPOLISH® Alumina No JB 0.05 micron				40-6353-0		
	MICROPOLISH® II 1.0 micron	40-6321-008	40-6121-01b	40-6 521-080			
	MICROPOLISH* M SO micron	40-6323-008	40-6323-016	40-6 121-080			
New Deagglomerated	MICROPOLISH* II 0.05 micron	40-6.125-008	40-6325-016	40-6125-080			
Aluminum Oxide (AL.00	MICROPOLISH»II 1.0 micron				40-b 161-0		
	MICROPOLISH* II 0.3 micron				40-6 56 1-0		
	MICROPOLISH* II 0.05 micron				40-b 165-0		
Cerium Oxide (CeO)	MICROMFI* 1. 0 micron				40-6155-0		
,	Chrome Oxide 1-5 mic ron		40-6480-016	40-6480-080			
Chromic Oxide	METPOLISH®No 1 1.0 micron			1	40-6481-0		
	METPOLISH® 0.5 micron	31313	-4.1		40-6482-0		
Magnesium Oxide (MgO)	MACOMLI :		40-04^0-016	m			
Iron Oxide (FeiOO	Jewelers Rouge 10 micron		40-6445-016	40-6480-080			
Colloidal Silica (SiOz)	MASTERMET'^	Liquid, 0,5 Ga	al (1.9/)		40-6370-0		

EXTENDERS FOR METADI*							
Cat. No.	Description	Cat. No.	Description				
40-61X14	METADI®Fluid 4 oz. (0.12/) with appl	40-8142-012	Polishing Oil M oz. (0.95/)				
40-6014	MEIAI)I®Fluid 4 oz. (0.12/) Refill	40-8142-128	Polishing Oil 1 gal. (1.8/)				
40-6016	METADI®Fluid 16 oz. (0.47/) Refill	60-3250-006	AUIOMLI® Lapping Oil do/. {() 18/)				
40-6012	MFTADI®riuid 12 oz. (0.95/) Relill	60-1250-128	AUTOMET®ldpping Oil 1 gal. (1.8/)				
40-32(XI	Atomizer Applied!or for METADI® Fluid	f.0-1255	Applicator Bottle 8 oz. (0,24/)				

# SUPPLIES FOR ECOMET® IV GRINDER/POLISHER AND EUROMET™ I POWER HEAD

METAD	® DIAMOND	COMPOUND	S	ME	TADP II DIAN	NOND COM	POUNDS	
PA 5 Grams	STE 20 Grams	MICRON	COLOR	<b>AEROSOL SPRAY</b> 5 <b>oz. (142</b> g)	MICRON	COLOR	PA: 5 Grams	STE   20 Grams
40-6112	40-6102	VA Medium	Gray	40-6260	1/4	Gray	40-6241	40-6240
40-6132	40-6122	1 Medium	Blue	40-6264	1	Blue	40-6244	40-6243
40-6138	40-6128	1 Heavy	Blue					
40-6152	40-6142	3 Heavy	Green	40-6268	3	Green	40-6247	40-6246
40-6172	40-6162	6 Medium	Yellow	40-6272	6	Yellow	40-6250	40-6249
40-6192	40-6182	9 Heavy	Deep Red	40-6276	9	Deep Red	40-6253	40-6252
40-6212	40-6202	15 Heavy	Brown	40-6280	15	Brown	40-6256	40-6255
40-6222	1.1	30 Medium	Mahogany	40-6284	30	Mahogany	40-6258	
40-6232		45 Medium	Purple	40-6288	45	Purple	40-6259	

# ECOMET® IV POLISHING CLOTHS

Cat.No.	DESCRIPTION
40-7062	NYLON 14" (35.5 cm) dia. plain back
40-7072	NYLON 12" (30.5 cm) dia. PSA back
40-7222	MICROCLOTH® 12" (30.5 cm) dia. PSA back
40-7242	MICROCLOTH® 14" (35.5 cm) dia. plain back
40-7412	SELECTED SILK™ 14" (35.5 cm) dia. plain back
40-7622	TEXMET® 12" (30.5) dia. PSA back
40-7642	TEXMET® 12" (30.5) dia. perf. adh. back
40-7742	MASTERTEX™ 12" (30.5) dia. PSA back
40-7912	CHEMOMET® I 14" (35.5) dia. plain back
40-7922	CHEMOMET® I (30.5) dia. PSA back

(Packaged 10 per Package)

# ECOMET? IV GRINDING DISCS

ZIRMET® 12" {30.5 cm) DIA PSA Back	GRIT	CARBIMET® 12" (30.5 cm) DIA PSA Back
15-5132-060-025	60	15-5112-060-100
15-5132-120-025	120	15-5112-120-100
15-5132-180-025	180	15-5112-180-100
15-5132-220-025	220	
particular a	240	30-5112-240-100
Wei Sch (	320	30-5112-320-100
	400	30-5112-400-100
	600	30-5112-600-100
(Packaged 25 per Box)		(Packaged 100 per Box)

# 49-1680 METADI® DIAMOND POWER LAPPING ACCESSORY

Diamond Power Lapping is a highly recommended substitute for the multi-stage abrasive fine grinding of harder, more difficult sample materials. This accessory produces smoother, flatter surfaces in less time and with less effort than with conventional fine grinding, procedures.

# 49-1681 ECOMET® IV FREE LAPPING ACCESSORY

Free lapping is recommended for preparing larger numbers of samples having a similar geometry. The surfaces produced are extremely flat and smooth but require longer lapping times than with Power Lapping.

#### 60-5460 EUROMET™ I DRESSING TOOL

This tool is used to true the surface of Metadi Diamond Power Lapping Platens which may become out-of-flat due to unusually heavy service. This tool is also included as part of the 49-1680 METADI® DIAMOND POWER LAPPING ACCESSORY.

# ECOMET® IV/EUROMET™ I ACCESSORIES (Continued)



#### 75-1940-115 ULTRAMET® IV SONIC CLEANER

Large (12%" W x 11%" D x 6" H ID) ULTRASONIC CLEANER, which effectively loosens entrapped and clinging abrasive and other contaminants to ensure thorough cleaning between various stages of preparations.

#### 75-5010 ULTRAMET® IV SAMPLE HANGERS

Sample Holders are held at a position to assure the best cleaning action.

## DIAMOND SLURRY

No. 40-6290 METADI® DIAMOND SLURRY, %, 1 pint (0.47 /).

No. 40-6292 METADI® DIAMOND SLURRY, 6JL, 1 pint (0.47 /).

#### PLATENS

No. 49-1676 ALUMINUM PLATEN, 12" (30.5 cm) dia, for use with abrasive paper or polishing cloth, extra. No. 49-1682 METADI® DIAMOND LAPPING PLATEN, 12" (30.5 cm) dia.

#### CHUCK AND LOADING PLATES

No. 60-5450 MAXI-LOK<sup>™</sup> CHUCK ASSEMBLY, extra, for use with additional specimen holders. No. 60-5455 SPECIMEN LOADING PLATE, extra.

SFECIMEN HOLDERS			
CATALOG NUMBER	NO. SAMPLES	SAMPLE SIZE	SAMPLE TYPE
60-5041	12	1" (25 mm)	Mounted
60-5042	10	1-1/4" (32 mm)	Mounted
60-5043	8	1-1/2" (38 mm)	Mounted
60-5340	5	2" (51 mm)	Mounted
60-5345	5	Rectangular holes	Unmounted
		to 2" x 1.375" (51x35 mm)	
60-5350	3	Rectangular holes	Unmounted
		to r x 1.375" (76x35 mm)	
60-5440	Variable	Mount to plain surface	Unmounted

#### SPECIMEN HOLDERS